

Case / Model No:	Description:
Top Level Generic	1- Plinth Change (Ventilated)

SOP Number:	Date:	Rev:
	12-15-2020	01

Plinth Changes-Ventilated

Ensure area is secured and cordoned off before working.

Where plinth changes are required for Ventilated plinths the cabinet must be isolated at the main control tray Isolation Switch (Picture 1) which is normally located on the top of the cabinet.

Once Isolated, the Plinth can then be removed by pulling it forward. These are mounted on magnets on the legs so no tooling is required.(Picture 2)

Locate the plug and disconnect and fully remove plinth. Ensure that this is stored safely.

The replacement plinth can now be plugged in and refitted to the cabinet ensuring that cables do not fowl any of the motors

Cabinet can now be switched back on. Fans will start straight away and once running check that all fans are working correctly.

Note

The Removed item will contain electrical components and metalwork. Appropriate disposal procedures will apply

